

Uputstvo za podešavanje USRobotics 9107(a/b) rutera








Sadržaj Vašeg pakovanja

- Jedan UsRobotics 9107(a/b) uređaj
- Jedan DC strujni adapter
- Jedan RJ-45 kabl
- Jedan RJ-11 kabl
- Instalacioni disk
- Uputstvo
- Spliter

Napomena: Molimo Vas proverite da li Vaše pakovanje sadrži sve gore navedene stavke.

Značenje LED indikatora


Oznaka	Stanje	Indikacija
	Isključen	Nema napajanja
	Uključen	Uključeno napajanje
	Isključen	Ruter nema konekciju sa telefonskom centralom
	Treperi	Ruter pokušava da uspostavi konekciju sa tel. centralom
	Uključen	Konekcija sa telefonskom centralom uspostavljena
	Uključen	Ruter je ostvario ADSL konekciju sa provajderom
	Sporo treperi	Ruter razmenjuje informacije sa internetom.
	Isključen	Ne postoji aktivna konekcija sa ADSL provajderom
	Uključen	LAN port radi ispravno
	Isključen	LAN port ne radi normalno
	Brzo treperi	U toku je slanje/primanje podataka
	Uključen	Veza sa štampačem uspostavljena.
	Isključen	Štampač nije priključen
	Treperi	U toku je razmena podataka između rutera i štampača

KORAK 1. FIZIČKO POVEZIVANJE ADSL RUTERA

ADSL splitter povežite **direktno** na telefonsku liniju kablom koji ide u port "Line" na spliteru. Iz porta "Phone" izvedite telefonski kabl na koji ćete povezati vaš telefonski aparat. Iz porta "ADSL" ("Modem") izvedite telefonski kabl koji ćete povezati sa vašim ADSL uređajem. Ethernet (mrežni) kabl povezati iz "Ethernet" porta u ADSL uređaju u "Ethernet" port na vašem računaru.


Svi telefonski aparati moraju da budu povezani preko **splitera**. Ukoliko nisu povezani preko splitera, svaki telefonski aparat mora imati postavljen **mikrofilter!**

Važno je obratiti pažnju na pravilnu instalaciju splitera:

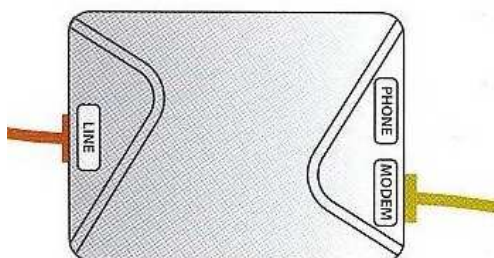

LINE – tel. kabl iz zida
MODEM – tel. kabl ka ADSL ruteru
PHONE – tel. kabl ka telefonu

ADSL ruter se priključuje na telefonsku liniju na način prikazan na slici:

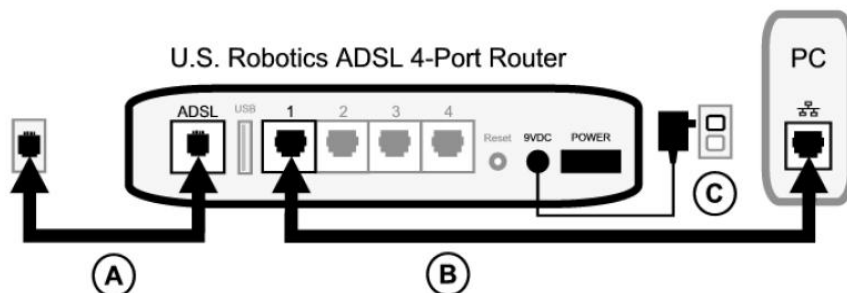

- A – Priključiti uređaj preko **splitera** na telefonsku liniju.
- B – Priključiti uređaj preko mrežne karte računara
- C – Priključiti uređaj na strujnu mrežu i uključiti uređaj na power prekidač

KORAK 2: Podešavanje WINDOWS-a

Meni za podešavanje mrežne karte računara:
U Meniju TCP/IP Properties:

Windows XP

Start → Control Panel → Network Connections –
> Local Area Connection → (Desni klik)
Properties → (General) → Internet Protocol
(TCP/IP) → Properties


b) Windows Vista

Start → Control Panel → Network and Sharing
Center → Manage Network Connections →
Local Area Connection → Properties →
Internet Protocol Version 4 → Properties

U Meniju TCP/IP Properties:

Proveriti da li je uključena opcija **Use the following IP address**

Čekirati opciju **Use the following DNS server addresses**, i uneti brojeve kao što je prikazano na Slici
Kliknuti OK

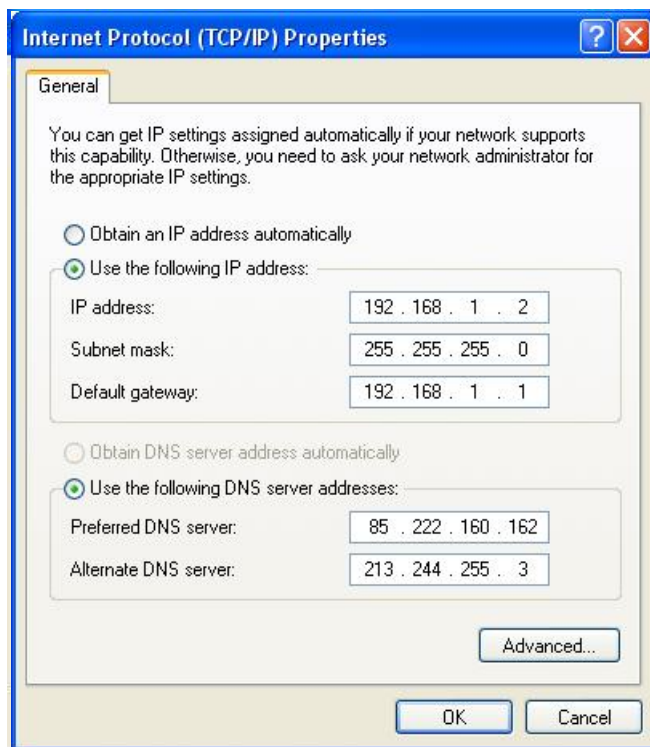

KORAK 3: KONFIGURISANJE RUTERA

Vašem ruteru pristupate preko web browsera (Internet Explorer, Mozilla Firefox, Opera, Google Chrome, ...), ukucavanjem adrese **192.168.1.1**

1. Klikom na **start** započnite konfiguraciju uređaja.
2.
 - Za **protokol** izaberite **PPP Over Ethernet (PPPoE)**
 - **Username:** [vaš_username@verat.net](#)
 - **Password:** vaša lozinka
 - **Authentication:** **PAP**

Po završetku navedenih koraka, proveriti ukucano i kliknuti **Next**.

3.
 - Izaberite šifru za uređaj kako bi se zaštitili od neželjenih pristupa na uređaj.
 - Pritisnite dugme **Next**.
 - Pritisnite dugme **Finish**, nakon čega će uređaj automatski pokrenuti proces pamćenja podešavanja i ponovnog pokretanja. Ova procedura može potrajati do 2 minuta, nakon čega možete nesmetano da prelistavate željeni web sadržaj.

Sledi grafički prikaz konfigurisanja uređaja.

1.

Thank you for purchasing the U.S. Robotics ADSL 4-Port Router.

This introductory setup guides you through two easy steps to establish a connection to the Internet and to secure your network. You can access the advanced features of the ADSL router after the setup is complete.

When you're ready to begin, press **Start**.

Start →

MAXimum range
MAXimum performance
MAXimum security
MAXimum simplicity

U.S. Robotics means **MAX**. **MAXg**

2.

Setup 1 ... 2

U.S.Robotics®

Configure Your Internet Connection

In order for your router to connect to the Internet, you will need to enter the information your Internet Service Provider (ISP) gave you for your DSL connection. You may need to contact your Internet Service Provider for assistance in determining the correct settings.

Protocol:

VPI: (0-255)

VCI: (32-65535)

Half-bridge (also known as "IP extension")

Quality of service

DSL Login

If your Internet Service Provider (ISP) provided a user name and password for your Internet connection, please enter them here. If you don't know this information, you may need to contact your ISP for assistance. In that case, complete the setup, and later use the router's **Internet** page to configure your Internet connection.

User name:

Password:

Authentication:

When you're finished and are ready to go to the next step, press **Next**.

Next →

3.

Setup 1 ... 2

U.S.Robotics®

Device Login

In order to secure the router against unauthorized access, please enter a password for the "admin" user. You will need to enter the user name and password in order to access the router in the future, so you may want to write them down.

User name: **admin**

Password:

U.S. Robotics recommends using a password of eight or more alphanumeric characters (such as "Canyon79Snow" or "2Lake6Forest3"). Please note that the user name and password are case-sensitive.

When you're done and are ready to apply all your settings, press **Next**.

Next →

Za dodatne informacije možete proveriti uputstvo uređaja na disku, posetiti zvaničnu podršku proizvođača (<http://www.usr.com/support/product-template.asp?prod=9107>) ili pozvati korisnički servis 011/3605 338.