

Uputstvo za podešavanje TP-LINK TD-W8901G 54M Wireless ADSL2+ rutera

Sadržaj Vašeg pakovanja

- Jedan TD-W8901G 54M Wireless ADSL2+ Ruter
- Jedan DC strujni adapter
- Jedan RJ-45 kabl
- Dva RJ-11 kabla
- Jedan ADSL splitter

Napomena: Molimo Vas proverite da li Vaše pakovanje sadrži sve gore navedene stavke.

LED indikatori na prednjem panelu su **Power**, **System**, **ADSL** i **WLAN** i **4 LAN** indikatora.

Značenje LED indikatora

Oznaka	Stanje	Indikacija
Power	Isključen	Nema napajanja
	Uključen	Uključeno napajanje
System	Isključen	Ruter ima grešku
	Uključen	Ruter se inicijalizuje
	Treperi	Ruter radi ispravno
ADSL	Isključen	Port sa oznakom LINE je isključen
	Uključen	Port LINE je ostvario ADSL konekciju sa provajderom
	Sporo treperi	Detekcija prilikom uključivanja
	Brzo treperi	Port LINE šalje ili prima ADSL podatke
WLAN	Isključen	Wireless funkcija je onesposobljena
	Sporo treperi	Wireless funkcija je osposobljena
	Brzo treperi	Slanje ili primanje podataka preko bežične mreže
1-4 (LAN)	Isključen	Nijedan uređaj nije priključen na dati port
	Uključen	Uređaj je priključen na dati port
	Treperi	Slanje ili primanje podataka preko datog porta

Izgled Vašeg rutera sa zadnje strane:




- **Linija (LINE):** Priključite na Modem Port Vašeg splitera ili na telefonsku liniju.
- **Reset dugme:** Postoje dva načina da resetujete Vaš ruter:
 - 1) Upotrebite **Restore Defaults** opciju iz **Management -> settings** strani iz Web-bazirane aplikacije za Vaš ruter.
 - 2) Iskoristite Reset dugme za vraćanje na fabrička podešavanja: pritisnite dugme i držite duže od pet sekundi, zatim sačekajte da se ruter resetuje.
- **1, 2, 3, 4 (LAN):** Pomoću ovih portova možete priključiti ruter sa Vašim PC-jem, (PC-jevima), kao i druge mrežne uređaje.


FIZIČKO POVEZIVANJE ADSL WIRELESS RUTERA

ADSL ruter se priključuje na telefonsku liniju na način prikazan na slici:

Važno je obratiti pažnju na pravilnu instalaciju splitera:

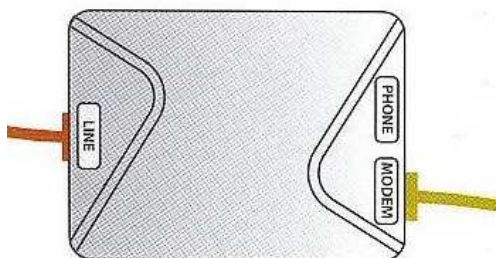

LINE – tel. kabl iz zida
MODEM – tel. kabl ka ADSL ruteru
PHONE – tel. kabl ka telefonu

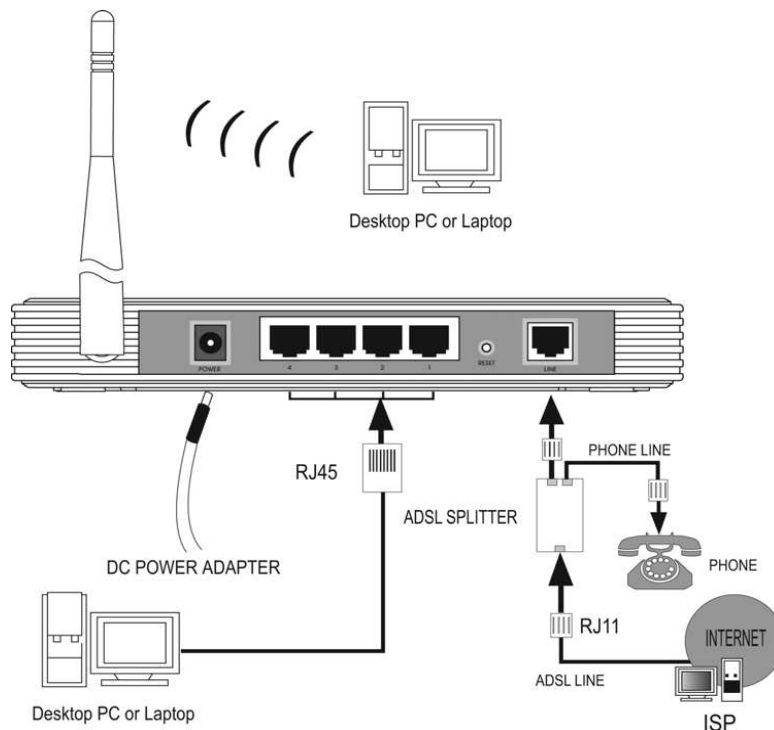

PODEŠAVANJE WINDOWS-a

Meni za podešavanje mrežne karte računara:
U Meniju TCP/IP Properties:

a) Windows XP


Start → Control Panel → Network Connections –
> Local Area Connection → (Desni klik)
Properties → (General) → Internet Protocol
(TCP/IP) → Properties

b) Windows Vista

Start → Control Panel → Network and Sharing
Center → Menage Network Connections ->
Local Area Connection → Properties –
> Internet Protocol Version 4 → Properties

U Meniju TCP/IP Properties:

- Proveriti da li je uključena opcija **Use the following IP address**
- Čekirati opciju **Use the following DNS server addresses**, i uneti brojeve kao što je prikazano na Slici
- Kliknuti OK

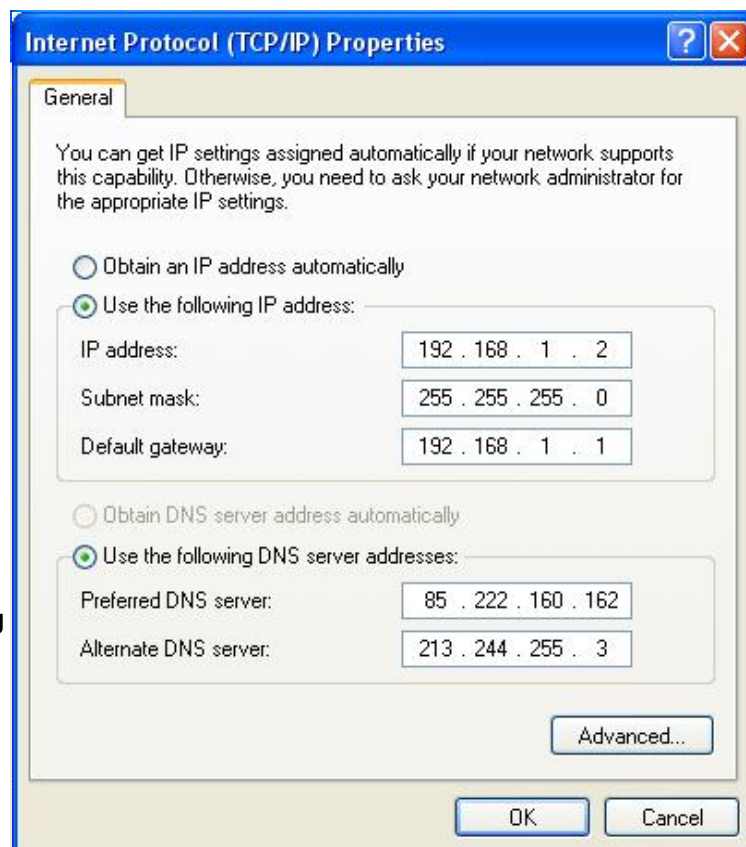

KONFIGURISANJE RUTERA

Vašem ruteru pristupate preko web browsera (Internet Explorer, Mozilla Firefox, Opera, Google Chrome, ...).

U adresnom bar-u Vašeg browser-a potrebno je ukucati IP adresu rutera: **192.168.1.1**

Pojaviće se dijalog box koji od Vas zahteva da unesete korisničko ime i šifru.

U polje User Name otkucajte **admin** i u polje Password takođe otkucajte **admin** i onda kliknite OK kako biste pristupili podešavanjima.

*Napomena: Ovo korisničko ime i šifra **nisu isti** kao i korisničko ime i šifra Vašeg ADSL naloga koji Vam je potreban za uspostavljanje veze. Ove parametre koristite samo u slučaju pristupa ruteru radi njegovog podešavanja*

Izabrati Interface Setup.

ATM VC

Za Virtual Circuit odabrati PVC4,

VPI: 8

VCI: 35

Encapsulation:

PPPoA/PPPoE

PPPoA/PPPoE


ServiceName: VeratNet

Username: vaš_username@verat.net

Password: *****

Encapsulation: PPPoE LLC

Po završetku navedenih koraka, proveriti ukucano i kliknuti SAVE.

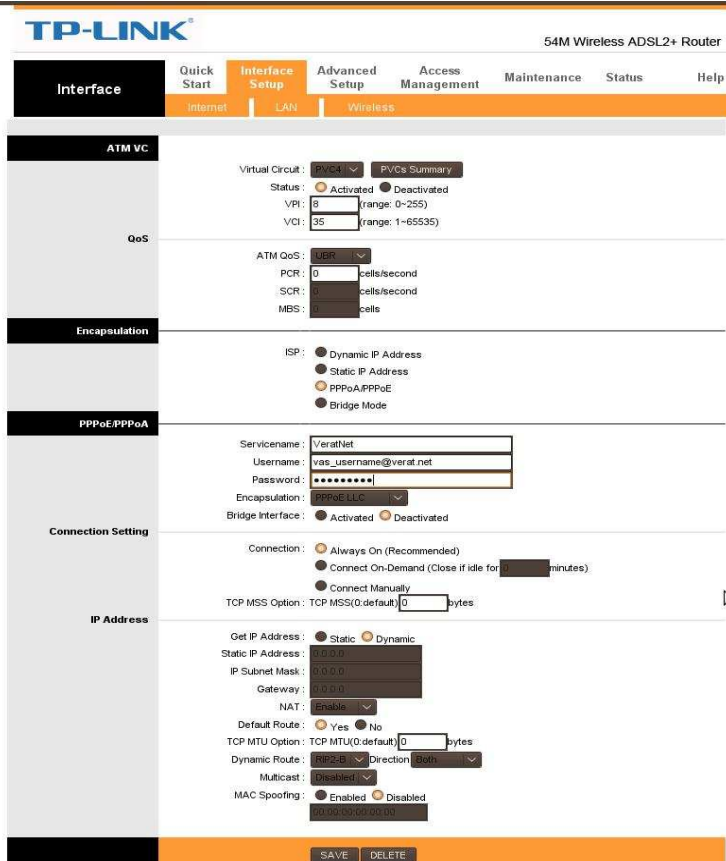


ZAŠTITA RUTERA

Ako ne zaštitite svoju Wireless mrežu lako se može desiti da vam neko neovlašćeno koristi Internet konekciju, da Vam ugrozi podatke na Vašim računarima, ubaci viruse i sl.

Kako Wireless omogućava pristup svima koji su u dometu Vašeg uređaja, neophodno je primeniti najmanje sledeća dva načina zaštite:

1. Promena passworda za pristup ruteru:

1. Kliknite na Maintenance
2. U polju *new password* unesite proizvoljnu lozinku
3. U polje *confirm password* potvrdite vašu lozinku
4. Kliknite na SAVE

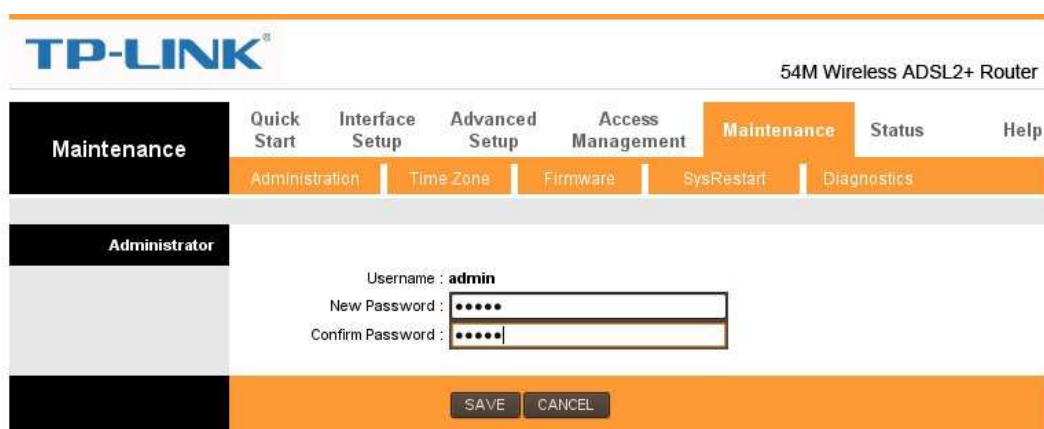


The screenshot shows the TP-LINK web interface for a 54M Wireless ADSL2+ Router. The 'Maintenance' tab is selected, and the 'Administrator' section is active. The 'Username' field is set to 'admin'. The 'New Password' and 'Confirm Password' fields are both masked with dots. 'SAVE' and 'CANCEL' buttons are visible at the bottom.

Napomena: Posle ovog koraka umesto lozinke admin koristite vašu novu lozinku za pristup ruteru.

2. Uvođenje passworda za konektovanje na Wireless

Da se zaštitite od neovlašćenog korišćenja interneta potrebno je staviti lozinku na sledećem mestu

1. Izaberite stavku Interface Setup pa Wireless
2. Pod stavkom Authentication Type izaberite WPA2-PSK
3. U polje Pre-Shared Key stavite proizvoljnu lozinku od minimum 8 karaktera
4. Kliknite na SAVE

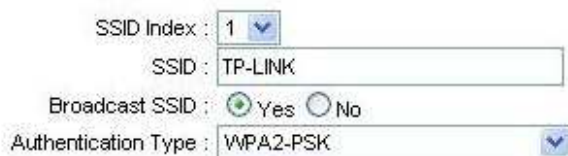

The screenshot shows the 'Wireless' settings page. The 'SSID Index' is set to 1, and the 'SSID' is 'TP-LINK'. The 'Broadcast SSID' option is selected as 'Yes'. The 'Authentication Type' is set to 'WPA2-PSK'.



The screenshot shows the 'Pre-Shared Key' field with the value 'vasa_lozinka' and a note '(8-63 characters)'.